

# Sunbeam

## SPECIALTY BREW DRIP FILTER COFFEE MACHINE

### User Guide

PC8100



# Contents

Sunbeam's Safety Precautions	3
Product Notices	4
Get To Know Your Coffee Maker	5
Understand Your Control Panel	6
Extra Accessories Included	6
Getting Started	7
Setting The Clock	8
Advanced Water Filtration	8
How To Make Your First Coffee	9-10
Grab-a-cup auto pause	11
Descaling Cycle	12
Tips On How To Brew The Perfect Cup	12
Carafe Use And Care	12
Warranty	13

## Important Instructions - Retain For Future Use

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解下列的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenli ürünlerinizin anlaşılabilirliğinden emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

**When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Children should not perform cleaning and user maintenance without supervision.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. The temperature of accessible surfaces may be high when the appliance is operating. Even after use, the heating element surface is subject to residual heat.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an Authorized Service Center for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.
10. The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Do not place in a cabinet when in use.
15. Always attach plug to appliance first, then plug cord into the wall outlet (for appliances with detachable cords). To disconnect, turn any control to the off position, then remove plug from wall outlet.
16. Do not use an appliance for any purpose other than its intended use. Injury could occur from misuse.
17. All lids should be closed during use.
18. Scalding may occur if the lid is removed during or immediately after the brewing cycles. Contents may be hot. Allow to cool before opening the lid.
19. This appliance is intended to be used in household and similar applications such as; staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

## **For appliances with glass carafe:**

16. The carafe is designed for use with this appliance. It must never be used on a range top.
17. Do not set a hot carafe on a wet or cold surface.
18. Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot carafe with cold liquids.
19. Do not use a cracked or chipped carafe or a carafe having a loose or weakened handle.
20. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

## Product Notices

1. Place the appliance on a hard, flat, level surface to avoid interruption of airflow underneath the coffeemaker.
2. Discard the carafe immediately if it is ever boiled dry.
3. Protect the carafe from sharp blows, scratches or rough handling.
4. Keep the area above the appliance clear during use, as hot steam will escape the appliance.
5. To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.



DO NOT PLACE BASE IN DISHWASHER.

DO NOT IMMERSE BASE IN WATER OR ANY OTHER LIQUID.


DO NOT BREW COFFEE WITHOUT PARTS FULLY ASSEMBLED.

## Get To Know Your Coffee Maker

1. Brew Basket Lid
2. Water Reservoir
3. Color Coded Carafe (dishwasher safe)
4. Illuminated 4-Hour Freshness Indicator
5. Color Coded Measuring Scoop
6. Advanced Water Filtration Holder
7. Advanced Water Filtration Cartridge
8. Warming Plate
9. Color Coded Carafe (dishwasher safe)
10. Grab-A-Cup Auto Pause
11. Removable Filter Basket (dishwasher safe)
12. Advanced Shower Head



## Understand Your Control Panel

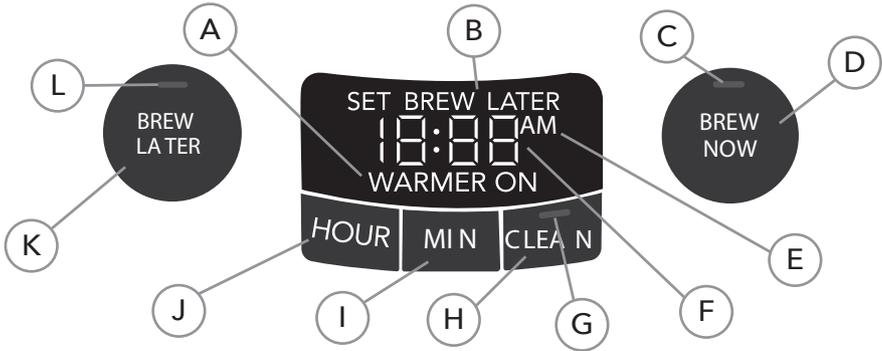

- A. Warming Plate ON Indicator
- B. Set Brew Later Indicator
- C. Brew Now Indicator
- D. Brew Now Button
- E. AM/PM Indicator
- F. Clock Display

- G. Clean Coffeemaker Indicator
- H. Clean Button
- I. Minute Button
- J. Hour Button
- K. Brew Later Button
- L. Brew Later Indicator

## Extra Accessories Included



Reusable  
Coffee Filter



Advanced Water  
Filtration Holder



Advanced Water  
Filtration Cartridge



Sunbeam Scoop

# Getting Started

## Unpack your Coffeemaker

1. Unpack your coffeemaker and remove plastic bags, cartons and any tape on the unit.  
**IMPORTANT:** KEEP PLASTIC BAGS AWAY FROM CHILDREN.

## Clean Coffeemaker Before Use

Just follow these simple steps:

1. Wash the carafe lid and the filter basket in a mixture of mild detergent and water. Rinse each thoroughly.
2. Replace all the parts and close the lid. Then, run a brew cycle by adding only water to the coffee maker. After adding water, press Brew Now.
3. When brewing is complete, turn your coffee maker off. Turn your coffee maker off by pressing the Brew Now button again.
4. Discard the water in the carafe and rinse the carafe, carafe lid, and removable filter basket.

**CAUTION:** The electrical base, power cord, and plug are not dishwasher safe and should not be immersed in water or other liquids.

**NOTE:** Advanced Water Filtration holder is dishwasher safe. Advanced Water Filtration Cartridges are not, do not place them in the dishwasher.

## Setting The Clock



Plug in the coffeemaker and set the current time using the hour and minute buttons. 5 seconds of inactivity will set clock at time selected.

## Advanced Water Filtration

The improved 2-step advanced water filtration system reduces impurities like chlorine and calcium to make coffee taste better.

1. Soak the advanced water filtration cartridge in cold water for 5 minutes.
2. Rinse the soaked cartridge for about 1 minute.
3. Open bottom hatch where the cartridge goes and insert a new Advanced Water Filtration cartridge. (Figure 1)
4. Close the hatch and place system in designated slot in water reservoir.(Figure 2)

**NOTE:** When cleaning the coffeemaker, be sure to remove the Advanced Water Filtration holder and cartridge.

**NOTE:** Replace filter cartridge frequently to ensure great tasting coffee. Contact Sunbeam for replacement cartridges.



(Figure 1)



(Figure 2)

## ILLUMINATED 4-HOUR FRESHNESS INDICATOR



The Illuminated 4-Hour Freshness Indicator feature automatically lets you know how long your coffee has been waiting for you. At the end of the brew cycle, the feature will automatically be activated.

The indicator changes to show the time since brewing began in 30 minute intervals, up to four minutes.

After 4 hours, the light will remain on for 10 minutes,

before the coffee maker automatically turns off.

To continue after 4 hours, press Brew Now and the timer will reset after it attempts to brew coffee.

# How To Make Your First Coffee

## Suggested Coffee Measurement Chart:

For best results, brew 4 or more cups of coffee.

Water To Brew	Ground Coffee
12 cups = 1800ml	3 Sunbeam Scoops
10 cups = 1500ml	2.5 Sunbeam Scoops
8 cups = 1200ml	2 Sunbeam Scoops
6 cups = 900ml	1.5 Sunbeam Scoops
4 cups = 600ml	1 Sunbeam Scoops

1. Fill the carafe with fresh cold water to the desired level. 1 Sunbeam "cup" is equivalent to 150 ml. Pour into Water Reservoir.



2. Insert and line the Removable Filter Basket with a reusable coffee filter.
3. Referencing the chart to the left, use Sunbeam Scoop to measure out the equivalent amount of coffee grounds into the filter.
4. You are ready to Brew Now!  
**NOTE:** Some water will be absorbed into the coffee grounds and water filter during the brewing process.
5. After brew cycle is complete, the coffeemaker will keep coffee warm for 4 hours before automatically shutting off.
6. Enjoy great tasting coffee every time!

## How To Make Your First Coffee (Con.)

### BREW NOW



1. After filling the coffeemaker with water and grounds, press the Brew Now button to brew instantly.
2. Brew Now indicator will illuminate.
3. "Warmer On" will illuminate on the display to indicate warming plate is on. The warming plate will stay on for up to 4 hours. The coffeemaker will beep to signal the end of the brew cycle.

**NOTE:** Push Brew Now button prior to 4 hours to turn the coffee maker off early.

### BREW LATER



**IMPORTANT:** YOU MUST SET THE CLOCK BEFORE USING THIS FEATURE.

1. Press Brew Later. The display flashes "12:00 AM". To set desired brew time, press the HOUR and MIN buttons. 5 Seconds of inactivity will set clock at time selected.
2. The Brew Later indicator will light up, showing that the coffee maker is pre-set to brew at a later time.

If you change your mind and wish to turn off the Brew Later feature, simply press the Brew Later button again and it will turn off. Once the Brew Later time is set, the coffeemaker will automatically remember it until you change it or unplug the machine.

**NOTE:** As a reminder, if you want to continue to use the Brew Later feature, you will have to press Brew Later each time. Your coffee maker will not automatically start again the next day.

## Grab-a-cup auto pause

Non-drip valve allows you to interrupt the coffee cycle when you want to grab a cup.

**NOTE:** The non-drip valve is a convenient way to pour a cup of coffee mid cycle, however it is ideal to wait until the end of the brewing cycle to ensure the optimum flavor from your coffee.

While this temporarily stops the coffee from dripping into the carafe, it does not stop the brewing process. After pouring a cup of coffee, the carafe should immediately be returned to the hot plate for completion of the brewing cycle and to prevent the filter basket from overflowing.



TO AVOID THE FILTER BASKET OVERFLOWING, THE CARAFE MUST FIT SECURELY INTO THE COFFEE MAKER HOT PLATE, WITH THE LID ON AT ALL TIMES. IF NOT PROPERLY POSITIONED ON THE HOT PLATE, HOT WATER OR HOT COFFEE MAY OVERFLOW.

DO NOT OPEN THE WATER TANK LID DURING THE BREWING CYCLE AS HOT STEAM COULD CAUSE INJURY. IF WATER/COFFEE IS NOT DRIPPING FROM THE COFFEE MAKER, IMMEDIATELY PRESS THE ON/OFF BUTTON, SWITCH OFF AT THE POWER OUTLET, UNPLUG AND WAIT 10 MINUTES BEFORE OPENING THE WATER TANK LID AND CHECKING THE FILTER BASKET.

THE COFFEE MAKER BECOMES HOT DURING THE BREWING CYCLE. PLEASE HANDLE WITH EXTREME CARE.

## Descaling Cycle

### Descaling your Sunbeam Specialty Brew Drip Filter coffee machine

Minerals (calcium/limestone) found in water will leave deposits in your coffeemaker and affect its performance. It's recommended that you regularly remove these deposits using vinegar.

1. **IMPORTANT:** Remove the advanced water filtration system from the coffeemaker.
2. Prepare 4 cups or 600ml of undiluted, white household vinegar. Pour the vinegar into the water reservoir.
3. Place the empty reusable filter into the filter basket and close the coffeemaker's lid.
4. Place the empty carafe back in the unit, centered on the warming plate.
5. Press the Clean button.
6. The coffeemaker will run a slow clean cycle and shut off.
7. Discard the cleaning solution and rinse the carafe thoroughly with clean water.
8. Fill the water reservoir with 12 cups of clean, fresh water.
9. Place the empty carafe back on the coffeemaker, centered on the warming plate.
10. Remove the reusable filter used during the cleaning cycle and rinse it thoroughly before replacing it in the filter basket.
11. Press Brew Now and allow the full brew cycle to complete, rinsing the coffeemaker with hot water.
12. Discard the water and rinse the carafe thoroughly with clean water.
13. Repeat steps 8 through 12 one more time, to ensure it is fully rinsed.

**Your coffeemaker is now clean and ready to brew the delicious, hot coffee!**

**NOTE:** It is recommended that you descale your coffeemaker every 30 days.

## Tips On How To Brew The Perfect Cup

**PAPER FILTERS:** To achieve a smoother, less bitter cup of coffee, use a paper filter. It will be most effective in trapping bitter sediments.

**REUSABLE FILTERS:** For a more robust and full taste, use a reusable filter. It will allow the coffee's full flavor to fill your cup. Reusable filters have tiny holes that allow rich coffee oils to brew through.

### Water

While it may not seem like an important ingredient, coffee is 98 percent water. The type of water that you brew with greatly affects the final taste. Always use clean, fresh water that is filtered and free of impurities – avoid soft water or well water. Please refer to the "Advanced Water Filtration" section to learn more about how your coffeemaker reduces impurities in water.

## Carafe Use And Care

Follow the instructions below to reduce or eliminate the chance of breaking the glass carafe:

- Discard the carafe immediately if it is ever cracked.
- Protect the carafe from sharp blows, scratches or rough handling. Do not use harsh abrasive cleaners that may scratch the carafe. Scratches may cause the carafe to break.



This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or

- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

**The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer care line for advice on: 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

**Should you experience any difficulties with your product during the warranty period, please contact Sunbeam Customer Care:**

**Australia**  
www.sunbeam.com.au  
1300 881 861  
Units 5 & 6,  
13 Lord Street,  
Botany NSW 2019  
Australia

**New Zealand**  
www.sunbeam.co.nz  
0800 786 232  
Level 6, Building 5,  
Central Park,  
660-670 Great South Road  
Greenlane, Auckland  
New Zealand

# Sunbeam

## Need help with your appliance?

Contact our Customer Care Team or visit our website for information and tips on getting the most from your appliance.

### AUSTRALIA

Visit: [www.sunbeam.com.au](http://www.sunbeam.com.au)  
Phone: 1300 881 861  
Mail: Units 5 & 6, 13 Lord Street,  
Botany NSW 2019

### NEW ZEALAND

Visit: [www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
Phone: 0800 786 232  
Mail: Level 6, Building 5, Central Park,  
660–670 Great South Road,  
Greenlane, Auckland



— APPROVED BY —



Sunbeam Corporation PTY LTD | ACN 000 006 771  
Sunbeam is a division of Newell Brands

Due to continued product improvements, product illustrations and photographs in this User Guide may differ slightly from the actual product.