

# *Sunbeam*

## BREAKFAST ESSENTIALS KETTLE & TOASTER

### User Guide

PU5201



# Contents

|                              |   |
|------------------------------|---|
| Sunbeam's Safety Precautions | 1 |
| Features of your Toaster     | 2 |
| Using your Toaster           | 3 |
| Toaster Functions            | 4 |
| Care and Cleaning            | 4 |
| Troubleshooting Toaster      | 5 |
| Features of your Kettle      | 6 |
| Using your Kettle            | 7 |
| Care and Cleaning            | 8 |

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM KETTLE.

- Always operate the kettle on a flat, level surface.
- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Boiling water may be ejected, if overfilled.
- Do not open lid while water is boiling.
- Do not operate the kettle without water.
- Always turn the power off and unplug the cord while the kettle is NOT in use.
- Your Kettle must only be used with the power base supplied.
- Do not move kettle while switched on.
- Do not use an appliance for any purpose other than its intended use
- CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is on.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent
- Only use this kettle with the stand provided
- Avoid spillage on the connector

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating or when the heating cycle has finished.
- Never leave an appliance unattended while in use.

 
If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not leave your toaster unattended when in use.
- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- WARNING: Never attempt to extract jammed toast, crumpets or muffins with a knife or any other metal object, as contact with a live element may cause electrocution.
- Do not attempt to move the appliance whilst hot
- Do not touch the metal top of the toaster during or after use as this gets very hot
- Do not lift or move the toaster by inserting fingers in the bread slot

- Potential injury may occur if this product is misused.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the power base or warming base in water or any other liquid.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Avoid spillage on the connectors of the warming base and base stand during normal use or cleaning.
- The heating element surface is subject to residual heat after use.

# Features of your Toaster

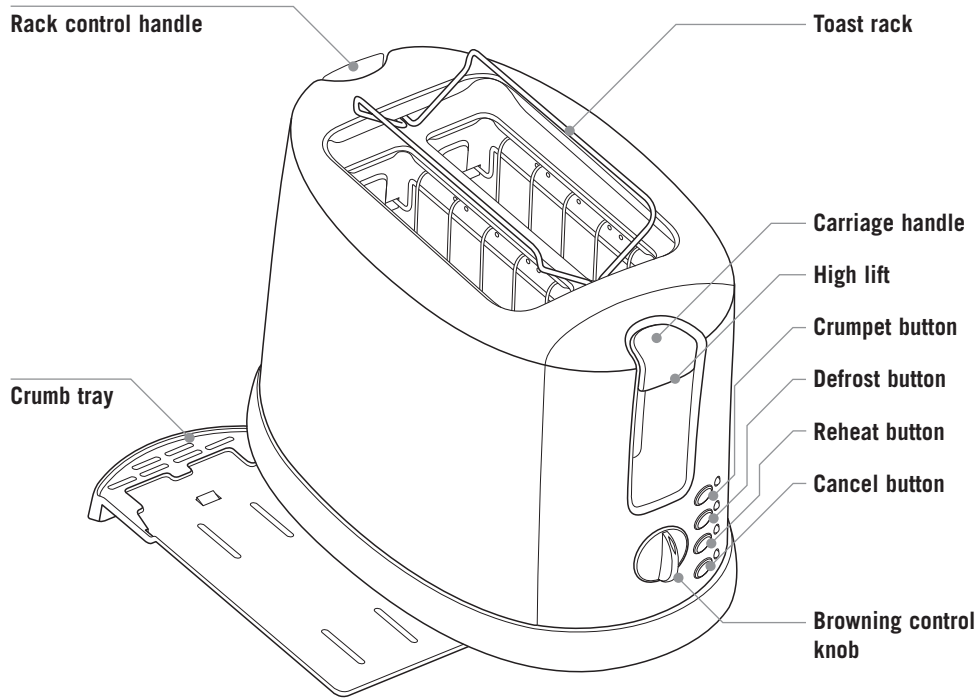

# Using your Toaster

## Toasting Bread

1. Position the bread into the bread slot.
2. Select the desired browning setting using the Browning Control.

**Note:** If toasting 1 slice it is recommended that you use a lower browning setting to achieve your required result and to prevent burning.

**Important:** Do not toast stale bread, rice crackers or similar on a high setting as there is a chance that they may catch fire.


3. Push the Toasting Lever down to commence the toasting cycle.
4. When the desired browning is achieved, the toaster will automatically stop toasting and pop the toast up.

5. If you need to remove the toast before the cycle is complete, press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.

6. To remove small pieces of toast, crumpets or bagels, use the High-lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

When toasting on the toast rack, press the rack control handle to make the toast rack uplift, then put the bread on the toast rack (see fig.1). Lift the rack control handle to reset the rack when not in use.

**Note:** Do not have bread in bread slots when using the Toasting Rack.



**Hot Surfaces  
Do Not Touch**

This symbol indicates that the temperature of accessible surfaces may be high when the appliance is operating and for some time after use.

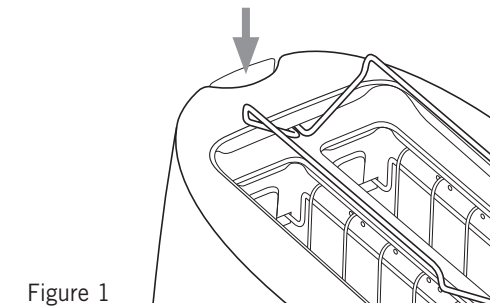 


Figure 1

# Toaster Functions

## Cancel button

The Cancel button immediately stops any of the toasting cycles. As a consequence of this, the toast will pop up.

## High-lift lever

When toasting small pieces of bread, crumpets or muffins we recommend using the High-lift lever to prevent you from burning your fingers.

## Crumpet Feature

The specialised crumpet setting cooks crumpets to perfection. When activated, heat is emitted from the outside elements to cook the top of your crumpet faster than the bottom. The top of the crumpet(s) must be facing towards the outside element.

## Defrost Feature

The defrost feature can be used to toast your frozen bread. The colour of your toast will brown according to the toasting setting you have chosen. This feature is activated by pressing the frozen button on at any time during the toasting cycle.

## Reheat button

The Reheat button can be selected after the toasting cycle has finished. Simply select the reheat button and press the toasting lever down to start the reheat cycle.

# Care and Cleaning

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

## To clean the exterior

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

**Do not use metal scourers or abrasives as this may scratch the exterior surface.**

## Removable Crumb Tray

To remove the crumbs, simply pull tray out, empty and place it back in the toaster.

**Important:** Clean the crumb tray regularly.

Do not allow crumbs to accumulate, as they may cause a potential fire hazard.

 
## To clean the toaster interior

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.

# Troubleshooting Toaster

| Problem  | Possible Cause   | Solution  |
|--|--|---|
| Unit is not heating or stops heating                                   | Electrical outlet is not working or toaster is unplugged | Check to make sure the outlet is working. Unplug unit and re-insert plug. Test toaster by selecting a setting and depressing the toast control level with nothing in the toaster  |
| Uneven toast   | Toasting single slice or toasting brown bread            | Simply reset the selector to the desirable setting  |
| Toast does not pop up high enough                                      | Different size of bread                                  | Use the high lift lever function to lift the bread  |
| Second toasting is too dark  | Setting on toast is too dark.                            | If doing repeated toasting in the toaster, you may want to select a setting lower than the previous setting   |
| Toast is too light or too dark   | You may have changed the setting                         | Simply reset the selector to the desirable setting for the function you wish to use   |
| You smell burnt food or smoke is coming out when toaster is being used | Remnants of food in crumb tray.                          | Refer to the directions in CARE AND CLEANING section of this booklet. Make sure the crumb tray is empty and wiped clean. Check to make sure no large crumbs are caught in the slot. Turn unplugged unit upside down over the sink and shake to remove crumbs. |

# Features of your Kettle

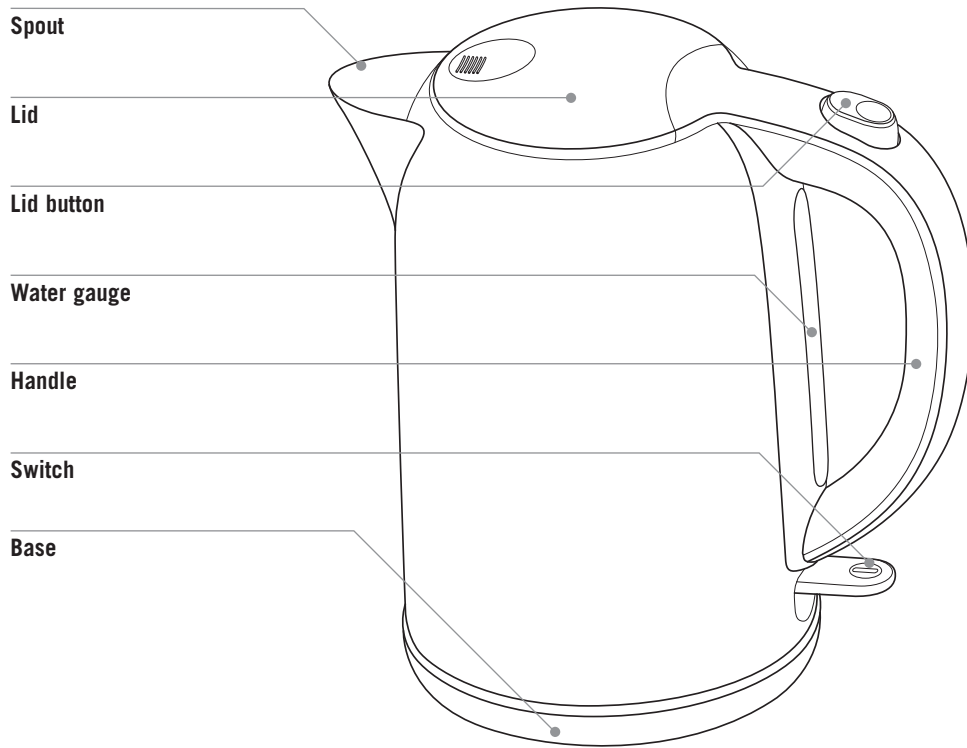

# Using your Kettle

## Before initial use of Kettle

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## Operation:

1. To fill water into the kettle, remove it from the power base and open the lid by pressing down on the lid button and filling the kettle with the desired amount of water. Always fill the kettle between the minimum (0.7L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

**Note:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Close the lid. Position the kettle on the power base.
3. Connect the plug into a power outlet. Lift the switch upwards to "I" position and the switch light illuminates. Then start to boil the water. The kettle will switch off automatically once the water has boiled and the switch light extinguishes. You can shut off the power by pressing the switch at any moment during boiling water.

**Note:** Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.

4. Lift the kettle from the power base and then pour the water.

**Note:** Operate carefully when pouring the water from the kettle as boiling water may result in scalds or burns. Do not open the lid while water is in hot kettle.

5. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15-20 seconds before reboiling. The kettle may be stored on the power base when not in use.

**Note:** Ensure power supply is turned off when kettle is not in use.

## Dry boil protection

Should you accidentally allow the kettle to operate without water, the dry boil protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with water and re-boiling.

# Care and Cleaning

Always disconnect the kettle from the power outlet before cleaning.

Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

## Descale Your Kettle Regularly

Mineral deposits in tap water solidify when the water is heated; lime scale may be white, coloured, even rusty-looking and is normally visible but phosphate scale isn't generally visible although may cause the water to appear cloudy when heated. This may cause the interior of the water gauge to discolour, cause overheating, trigger the boil-dry cut-out mechanism or even reduce the kettle's life. Even in soft water areas it is important to descale your kettle regularly to help maintain its lifecycle.

**Note:** Failure to descale products regularly can be deemed as negligent handling and any faults caused by mineral build up will not be covered by the Sunbeam 12 Month Guarantee.

To remove this build-up, use Sunbeam Liquid Descaler, a simple to use, non-toxic cleaner available from Sunbeam Appointed Service Agents.

## Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. DO NOT BOIL.
2. Empty the solution from the kettle.  
Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

## To clean the stainless exterior

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

**Caution:** Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the stainless steel surface.

## Cleaning the concealed heating element

This kettle features a non-corrosive stainless steel heating element. Over time, scale may build up on the concealed element inside the kettle, causing discolouration that may have the appearance of rust. Be assured this is not rust. If this occurs clean with a green Scotchbrite® scourer or similar and a suitable abrasive cleaning cream. Rinse and clean thoroughly with tap water before using your kettle again.



This product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Crock-Pot will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase, on our Sunbeam website and uploading a copy of your original receipt. View the Support section of the Sunbeam website.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling

(including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

-servicing or modification of the product other than by Crock-Pot or an authorised service centre;  
-use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Crock-Pot specifications; or  
-exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

**The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

**If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.**

**Should your product require repair or service after the warranty period, contact your nearest service centre. For a complete list of service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.**

**Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.**

## Australia

www.sunbeam.com.au  
1300 881 861

## New Zealand

www.sunbeam.co.nz  
0800 786 232

## **Need help with your appliance?**

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | visit [www.sunbeam.com.au](http://www.sunbeam.com.au)  
phone 1300 881 861

New Zealand | visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
phone 0800 786 232

Newell Australia Pty Ltd. ABN 68 075 071 233

Sunbeam is a registered trade mark.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise,  
the product you buy may differ slightly from the one shown here.

Approved by the appropriate electrical regulatory authorities.

©Copyright Sunbeam 2021.