

Sunbeam

Power Shot Handheld Garment Steamer

User Guide

SGS0900



Contents

Sunbeam's Safety Precautions	3
Before First Use	4
Sunbeam Power Shot Handheld Garment Steamer	4
About Your Features	5
Operating Instructions	5-7
Care And Cleaning	8
Troubleshooting	9
Warranty	10

Important Instructions - Retain For Future Use

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解下列的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin antlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions

1. Use appliance only for its intended use.
2. To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
3. Always turn the appliance to "Off" before plugging or unplugging the appliance from the electrical outlet. Never pull the cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
5. Make sure unit is off, unplugged and allow it to cool completely before filling or cleaning.
6. Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance, take it to a qualified service center for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Burns could occur from touching hot metal parts, hot water, or steam. Use care when you turn a steam appliance upside down – there may be hot water in the reservoir.
10. To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
11. To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
12. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
13. When filling the water tank, watch for water that can drip onto the floor and cause you to slip and fall.
14. Appliance may cause personal injury or be damaged if dropped.
15. The use of attachments not recommended or sold by the appliance manufacturer may cause injuries or void your warranty.
16. To avoid personal injury and damage to the appliance, only add water to the water tank. NEVER add cleaning solutions, perfumes, oils or any other chemical additives.
17. Care should be taken when using the appliance due to the emission of steam.
18. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

Thank you for purchasing the Sunbeam Power Shot Handheld Garment Steamer. With continuous steam technology and powerful shot of steam, this Steamer will bring out the best in garments, linens, drapes and more-quickly and efficiently! .

Before First Use

- Unpack your Steamer; remove and peel off any labels adhered to the unit.
- Remove and save instruction manual.
- Wipe outside of the unit with a damp cloth or sponge to remove any dust. Dry thoroughly.
- Keep unit on a flat, leveled surface.
- When using your Steamer for the first time, you may notice a small amount of smoke and a slight odor. This is normal when heating the appliance for the first time and there is no reason for concern.

Sunbeam Power Shot Handheld Garment Steamer

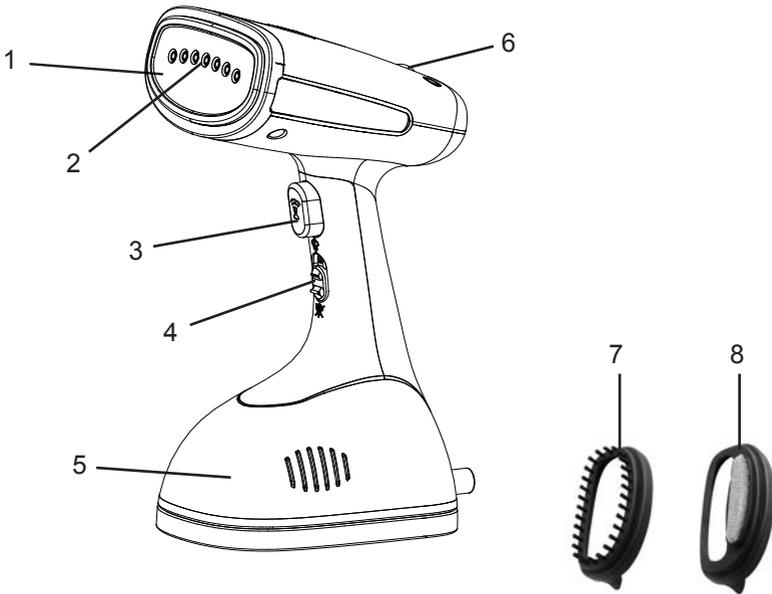

1. Heated press bar
2. Steam exit
3. Shot of steam button
4. Continuous steam switch
5. Removable water tank with water inlet tube
6. Red ready indicator light
7. Fabric Brush
8. Lint Brush

About Your Features

Heated press bar – Works like an iron soleplate to press wrinkles out.

Wide steam exit – Provides wide coverage of steam for your garments and fabrics.

Continuous Steam switch – gives you the option to steam on demand for up to 14 minutes of continuous steam.

Removable water tank with water inlet tube – Easy to remove for quick refills. A water inlet tube inside the water transmits the water from the tank to steamer head. A loud vibrating noise indicates that the water is low in the water tank and time to refill.

Red power indicator light – Lights up when unit is plugged in to an electrical outlet.

Red ready indicator light – Turns off to indicate the unit is ready for use.

Operating Instructions

FILLING WATER TANK

Warning: To avoid personal injury and damage to the unit, only add water to the water tank. NEVER add cleaning solutions, perfumes, oils or any other chemical additives.

Note: Your Steamer is designed to be used with tap water. However, if you have hard water, we recommend using distilled water for better results.

1. Place Steamer on a flat surface.
2. Hold the water tank with one hand while pulling the tank away from the steamer body.

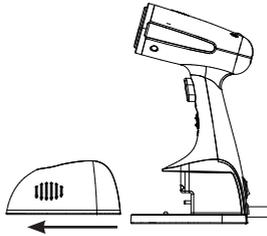


Figure 1

3. Take the water tank to a sink. Pull the rubberized water-fill cover to open and pour tap water from the tap into the water-fill opening until it reaches the Max water level in water tank (Figure 2). If water spills outside of the tank, or within the center water tank cavity, wipe it dry with a paper towel or cloth.

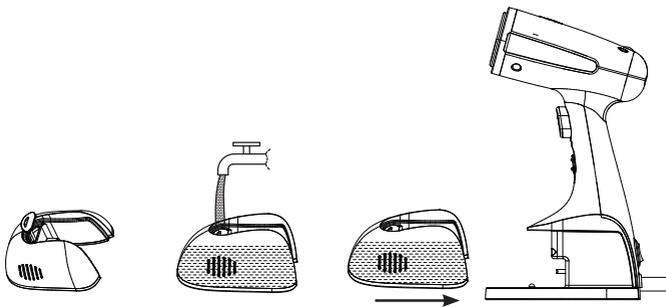


Figure 2

Warning: When filling the water tank, watch for water that can drip onto the floor and cause you to slip and fall.

Tip: It is not necessary to have a full tank of water for the Steamer to generate steam. For best results, just make sure the water tank is at least half full.

4. Close the water-fill cover, push the water tank into the steamer body until a 'click' sound is heard.

Note: If you need to add water while steaming, unplug the steamer, wait until it cools and follow above steps. If a loud vibrating noise is heard, then the water level is low and needs to be refilled.

USING YOUR STEAMER VERTICALLY

You can use your Steamer in the vertical position to press with steam hanging garments and drapes.

Caution: Heated press bar gets hot. Do not touch!

1. Hang your garment to be steamed on a clean, rust-free hanger.
2. Plug unit into a standard electrical outlet.

Warning: Care should be taken to arrange the cord so that it cannot be pulled or tripped over. Always make sure you can move freely without getting tangled with the cord.

3. The red ready indicator light turns off and will cycle on and off as the temperature is maintained.

Caution: Burns could occur from touching hot metal parts, hot water, or steam. Use care when you turn a steam appliance upside down – there may be hot water in the reservoir.

4. You are now ready to start steaming!
5. Turn the continuous steam switch on
6. Hold your Steamer by the handle in vertical position with the head pointing toward the fabric and away from you and your body.

Warning: Steam is hot. Always point steamer exit away from yourself, other persons, pets, plants and walls. Never steam clothes while they are being worn.

7. With your free hand, pull the fabric tight.
8. Press the shot of steam button to generate bursts of steam.

Caution: do not press the shot of steam button before the ready indicator light turns off or if the unit is off.

9. Touch the fabric lightly with the heated press bar, moving it in a downward motion, beginning at the top of the garment and moving downward.

Caution: The heated press bar gets hot, do not touch.

10. Repeat this step until fabric is wrinkle free.

Tip: For more difficult wrinkles, try steaming from the underside of the fabric.

11. When finished, move trigger switch on the back of the steamer to the Off position.
12. Place Steamer on a flat surface and unplug from electrical outlet.
13. Wait until Steamer has cooled and empty water tank.

Note: Always unplug the Steamer when not in use.

STEAMING HORIZONTALLY

You can also use your Steamer as an iron to refresh sheets, pillows, mattress, sofas and more.

1. Ensure water tank is filled.
2. Once the Steamer has reached set temperature, press turn the continuous steam switch on and in a horizontal position, move the steamer continuously over the fabric being steamed.

Caution: The heated press bar gets hot, do not touch.

3. Plug unit into a standard electrical outlet.

Warning: Care should be taken to arrange the cord so that it cannot be pulled or tripped over. Always make sure you can move freely without getting tangled with the cord.

4. The red power indicator light illuminates and will cycle on and off as the temperature is maintained.

Caution: Burns could occur from touching hot metal parts, hot water, or steam. Use care when you turn a steam appliance upside down – there may be hot water in the reservoir.

5. Once you finish, move trigger switch on the back of the steamer to the Off position. Wait for unit to cool completely before emptying the water tank or removing accessory.

TIPS FOR APPLYING STEAM

- Improper use of the Steamer can cause property damage due to the steam. Always read the instructions in this manual before using your Steamer.
- Do not operate the Steamer with an empty water tank. To add water during operation, turn steamer off, wait for it to cool down then remove water tank and refill.
- Always read the fabric care labels to help determine fabric type to be steamed. If unsure of fabric's fiber, test a small hidden area, such as an inside seam or hem, before steaming.
- For more difficult wrinkles, try steaming from the underside of the fabric.
- When steaming, touching fabric lightly with the steam nozzle can help in wrinkle removal. It is important to make contact with the garment and/or fabric.
- Heavier fabrics require more steam.
- Only use water in the unit. Do not add cleaning solutions, scented perfumes, oils or any other chemicals to the water that can cause damage to the appliance.
- Do not use steam against wall or doors.
- When hanging garment on a door while steaming, be careful not to damage the door with steam.
- After use, empty water tank by turning it upside down to ensure all water empties out and avoid leaks.
- When steaming, move the steamer continuously over the item being pressed. Do not keep steamer over an area for any period of time to avoid damage to the fabric.

Care And Cleaning

CLEANING

1. Make sure unit is off, unplugged and allow it to cool completely before cleaning.
2. If there is water in the water tank, remove the tank and turn it upside down to ensure all the water empties out.
3. Wipe exterior surfaces with a soft, damp cloth. Dry thoroughly.
Warning: Never immerse steamer, cord or plug in water or any other liquid.
 - Do not use abrasive cleaners or scouring pads that can scratch the surface.
 - Do not place in the dishwasher.

CLEANING WITH VINEGAR AND WATER

It is recommended to clean your Steamer every two months to reduce mineral buildup that can affect the performance of your unit.

1. Turn off the unit and let it cool completely.
2. Remove water tank and make sure it is empty.
3. Fill water tank with a solution of 50% white vinegar and 50% water up to the max level.
4. Plug unit into electrical outlet and press the continuous steam trigger to run a full steaming cycle.
5. Once steaming is finished, fill with clean water and repeat process until the vinegar odor is eliminated.

STORAGE

Fold the cord in loops and store the unit in upright position, in a clean dry place with a flat, sturdy surface. Make sure the water tank is empty. If not, remove it and turn it upside down to ensure all the water empties out and avoid leaks.

Troubleshooting

Problem	Possible Cause	Solution
The steamer does not produce any steam.	<p>The steamer has not heated up sufficiently.</p> <p>The water level in the water tank is too low.</p> <p>The steamer is not plugged in.</p> <p>Electrical outlet is not working.</p> <p>The steamer is not turned on.</p>	<p>Let the steamer heat up for about 45 seconds before using it.</p> <p>Unplug the steamer, let it cool completely and refill the water tank.</p> <p>Make sure the steamer is plugged into an electrical outlet.</p> <p>Plug into another electrical outlet.</p> <p>Make sure the power indicator light is on.</p>
The steamer makes a rattling noise and vibrates.	The water pump inside the unit detects the water level is low.	Unplug the unit, let it cool completely and refill water tank.
The steamer leaves water drops on the garment.	You may have pressed the shot of steam button before the steamer ready indicator light turned off.	Allow the ready indicator light to turn off before pressing the shot of steam button or sliding the switch to the on position.
The steamer is making a buzzing noise while steaming.	The water pump is running.	This noise is normal.

Warranty

2
Year
Replacement
Guarantee

This Sunbeam product is covered by a 2 year replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861
Units 5 & 6,
13 Lord Street,
Botany NSW 2019
Australia

New Zealand

www.sunbeam.co.nz
0800 786 232
Level 6, Building 5,
Central Park,
660-670 Great South Road,
Greenlane, Auckland
New Zealand

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 2 years of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or

- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Sunbeam

Need help with your appliance?

Contact our Customer Care Team or visit our website for information and tips on getting the most from your appliance.

AUSTRALIA

Visit: www.sunbeam.com.au
Phone: 1300 881 861
Mail: Units 5 & 6, 13 Lord Street,
Botany NSW 2019

NEW ZEALAND

Visit: www.sunbeam.co.nz
Phone: 0800 786 232
Mail: Level 6, Building 5, Central Park,
660–670 Great South Road,
Greenlane, Auckland



— APPROVED BY —



Sunbeam Corporation PTY LTD | ACN 000 006 771
Sunbeam is a division of Newell Brands

Due to continued product improvements, product illustrations and photographs in this User Guide may differ slightly from the actual product.