StickMaster

User Guide

SM7500BK

SM7300RD

Contents

Sunbeam's Safety Precautions	**1**
Features – SM7500BK	**2**
Features – SM7300RD	**3**
Using your StickMaster	**4**
A Guide to your StickMaster	**7**
Care & Cleaning	**8**
Warranty	**9**

Important instructions – retain for future use.

تأكد من تفهّم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاطهای بالا حتماً درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM STICKMASTER.

- Do not handle appliance with wet hands.
- Avoid contact with moving parts.
- Do not touch the blade while it is operating, as it is very sharp. After the appliance has been switched off the blade will continue to rotate a moment longer.
- Turn the power off and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not use the appliance with hot liquids, as there is a risk of burns due to splashing. Allow hot liquids to be cool enough to touch.
- Hold the StickMaster firmly and up right while using it.
- Care should be taken when handling sharp cutting blades, emptying the bowl and during cleaning.
- Injury may occur if the StickMaster is not used as intended.
- Do not operate the appliance without a workload.
- When using extremely heavy loads, the appliance should not be operated for more than 4 seconds. This does not apply to the recipes detailed in this booklet.
- Never insert metal or other utensils, such as knives or forks, into the inside of the blade system while the appliance is operating.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance unattended, before assembling, disassembling or cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Sunbeam StickMaster - SM7500BK

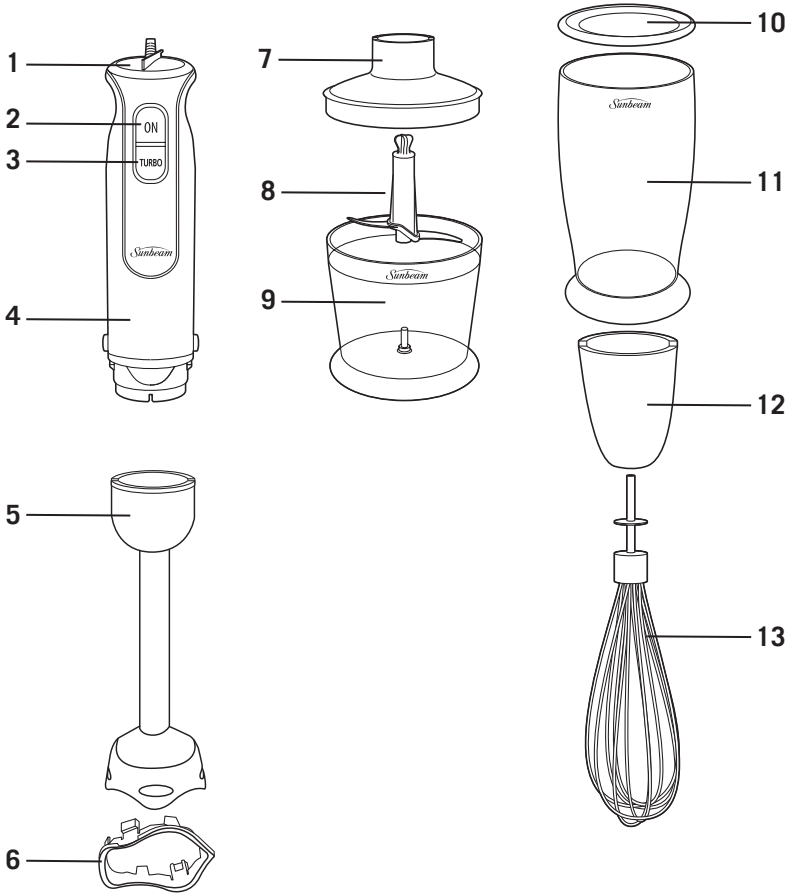

1. Speed Adjustment
2. ON Button
3. Turbo Button
4. Motor housing with powerful 800 Watt motor
5. Detachable Stainless Steel Wand
6. Anti-scratch Cover
7. Chopper Lid
8. Chopper Blade Attachment
9. Chopper Bowl
10. Beaker Lid
11. Beaker
12. Whisk Attachment Collar
13. Whisk

Features of your Sunbeam StickMaster - SM7300RD

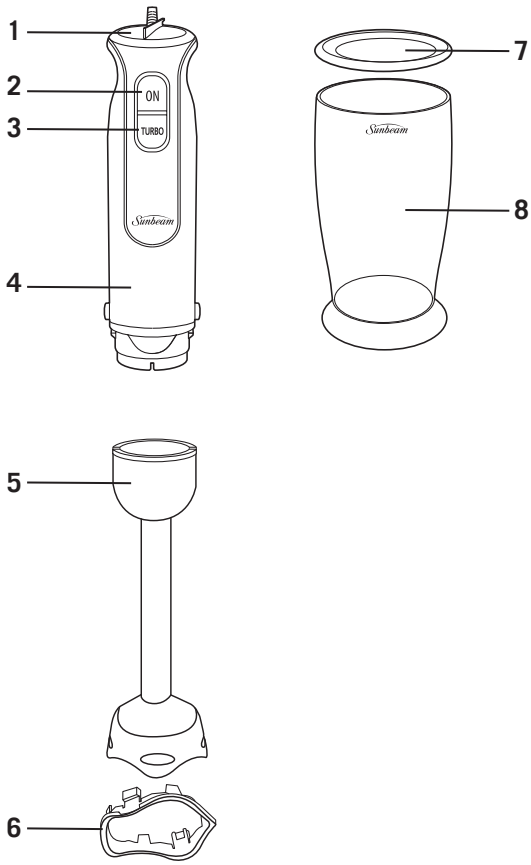

1. Speed Adjustment
2. ON Button
3. Turbo Button
4. Motor housing with efficient 400 Watt motor
5. Detachable Stainless Steel Wand
6. Anti-scratch Cover
7. Beaker Lid
8. Beaker

Using your StickMaster

It is recommended to wash your StickMaster wand, beaker, chopping bowl and whisk in warm soapy water with a soft cloth before use. Rinse and dry thoroughly.

Important: Before using your StickMaster remove any packaging material and promotional labels or tags.

Important: Ensure that the StickMaster is unplugged from the power outlet before assembling or removing attachments.

1. Squeeze and hold the two buttons on either side of motor housing while attaching wand (align the buttons with the 2 "cutouts" on the wand,release buttons and check wand is attached firmly) See Figure 1.

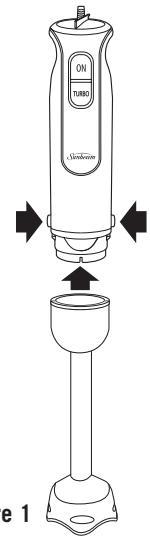

Figure 1

2. Plug the power cord into a 240 V power outlet and turn the power on.
3. Adjust the speed dial at the top of the motor housing and press the ON or TURBO button (**TURBO**).

NOTE: All stick blenders are designed to operate only when the ON buttons remain pressed.

NOTE: The ON button should be released when selecting the turbo speed button (**TURBO**).

NOTE: Do not operate wand attachment continuously for more than 60 seconds. Allow 1 minute rest period between use.

4. To stop the StickMaster, take your finger off the ON button or the turbo speed button (**TURBO**).
5. To detach the wand, press the two buttons on either side of the motor housing and pull apart. See Figure 2.

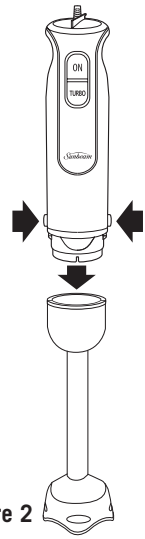

Figure 2

Using the Anti-scratch cover

To remove the anti scratch cover:

1. Press the anti-scratch cover in the positions shown below.
2. Remove the cover to clean.
3. To attach anti-scratch cover.
   Align with wand and push on until fitted correctly (you will hear 2 clicks)

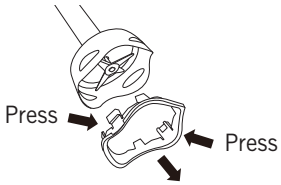

Using the chopper attachment

1. Place the chopper bowl on a flat surface, ensuring the surface is clean and level. Ensure the black base is fitted correctly.
2. Fit the stainless steel chopping blade into the chopper bowl.

   NOTE: Care shall be taken when handling sharp cutting blades.

3. Place food into the chopper bowl.
4. Attach the lid onto the chopper bowl and rotate the lid in a clockwise direction until it locks into position.
5. Squeeze and hold the two buttons on the side of the motor housing together. Line up the two cut outs (one on each side) on the chopping bowl lid and push the motor housing unit and bowl lid together. Release the two buttons. Ensure that they are correctly assembled and securely locked in position. See Figure 3.

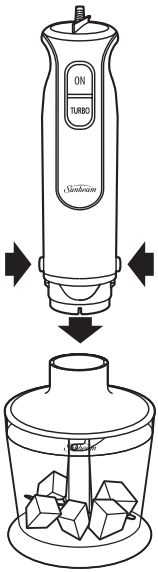

Figure 3

6. Plug the power cord into a 240 V power outlet and turn the power on.
7. Hold the bowl with one hand while operating the StickMaster. Press the ON or TURBO button (**TURBO**) on the motor housing.

NOTE: Do not operate the chopping attachment continuously for more than 10 seconds. Allow 1 minute rest period between use.

NOTE: All stick blenders are designed to operate only whilst the ON buttons remain press.

NOTE: The ON button should be released when selecting the turbo speed button (**TURBO**).

8. To stop the StickMaster, take your finger off the ON button or turbo speed button (**TURBO**).
9. To detach the chopping attachment, squeeze the 2 buttons (one on each side) and lift the motor housing unit upwards to remove. See Figure 4.

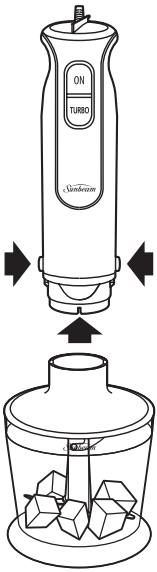

Figure 4

NOTE: Care shall be taken when handling sharp cutting blades, emptying the bowl and during cleaning.

NOTE: Black base can be removed and used as a lid for storage if desired.

Using the whisk attachment

1. Squeeze and hold the two buttons on either side of motor housing while attaching whisk attachment (align the buttons with the 2 "cutouts" on the whisk attachment, release buttons and check wand is attached firmly). See Figure 5.

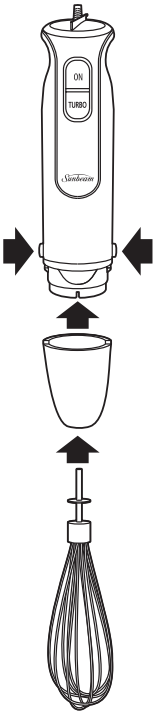

Figure 5

2. Plug the power cord into a 240 volt power outlet and turn the power on.
3. Holding the StickMaster, lower the whisk into food and press the ON or TURBO button (**TURBO**) on motor housing.

NOTE: Do not operate the whisk attachment continuously for more than 2 minutes. Allow 1 minute rest period between use.

NOTE: All stick blenders are designed to operate only whilst the ON buttons remain pressed.

NOTE: The ON button should be released when selecting the turbo speed button (**TURBO**).

5. To stop the StickMaster, take your finger off the ON button or the turbo speed button (**TURBO**).
6. To detach the whisk attachment, press the two buttons on either side of the motor housing and pull apart.

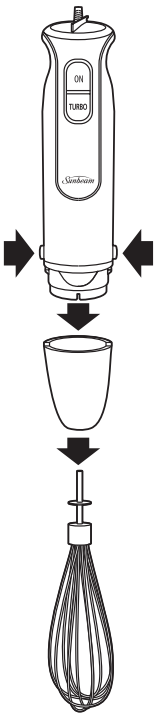

Figure 6

NOTE: Lid can be attached to base of beaker for extra grip.

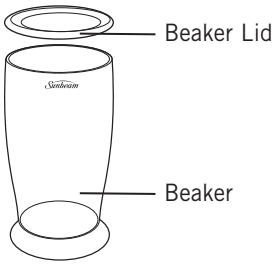

A Guide to your StickMaster

Attachment	Processing Task	Food	Suggested Processing Procedure
	Aerating	Milkshakes, Smoothies, Cocktails, Fruit Frappes	Use chilled milk. Blend until desired consistency is achieved.
	Pureeing	Soups, Sauces, Dips, Baby Food	Blend until smooth.
	Ice Crushing	Cocktails, Children's Ice Treats	Use small sized ice cubes and add ¼ cup of water.
	Emulsifying	Salad Dressing	Blend until well combined.
	Mincing	Red meat, Chicken fillets, Fish fillets, Prawns	Use the Turbo setting.
	Chopping	Herbs, Nuts, Olives, Fruit, Vegetables	Process ½ cup at a time, to ensure evenly sized pieces.
	Dicing	Onions, Garlic, Ginger, Leeks, Carrots	Use the Turbo setting.
	Crumbing	Bread Crumbs	Tear bread roughly. Process until desired consistency.
		Biscuit Crumbs	Break into pieces and process until crumbed.
	Whisking	Cream, Egg Whites, Light Batters	Whisk until peaks stand firm without collapsing.

Care and Cleaning

After each use it is recommended

1. Always remove the power cord from the power outlet before cleaning and remove the detachable wand of the StickMaster.

   NOTE: DO NOT immerse, that is, soak the detachable shaft of the StickMaster in water because overtime the lubrication on the bearings can wash away.

2. Wash the detachable wand under running water, without use of abrasive detergents.
3. When you have finished cleaning the detachable wand of the StickMaster, place it upright so that any water which may have got in, can drain out.
4. Attachments including the beaker, chopper bowl and chopping blade can be washed in hot soapy water.
5. Dry thoroughly.

IMPORTANT: Blades are extremely sharp, handle with care.

NOTE: Should the stainless steel chopper blade dull from extensive use, sharpening is recommended at your local sharpening shop to ensure consistent results.

For a quick wash up

Between processing tasks, hold the StickMaster in the beaker half filled with water and press the ON button for a few seconds.

Dishwasher Use

All plastic components deteriorate through prolonged dishwasher use.

However, parts of your StickMaster are tolerant to dishwasher use. These include the wand, beaker, chopper bowl, chopper blade and whisk.

NOTE: Place only on the top rack of the dishwasher.

IMPORTANT: Motor housing, whisk attachment collar and chopper lid are not dishwasher safe.

Motor Housing

Clean the motor housing with a damp cloth.

IMPORTANT: Ensure that the motor housing is not immersed in water or any other liquid.

12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861

New Zealand

www.sunbeam.co.nz
0800 786 232

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase, on our Sunbeam website and uploading a copy of your original receipt. View the Support section of the Sunbeam website.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Under our warranty, should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Our warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Our warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;
  - servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
  - use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
  - exposure of the product to abnormally corrosive conditions; or
- extend beyond 3 months if the product is used in commercial, industrial, educational or applications (other than for internal or own use in an office environment).

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia	visit	www.sunbeam.com.au
	phone	1300 881 861
New Zealand	visit	www.sunbeam.co.nz
	phone	0800 786 232

Newell Australia Pty Ltd. ABN 68 075 071 233
Sunbeam is a registered trade mark.
Made in China to Sunbeam's specification.
Due to minor changes in design or otherwise,
the product you buy may differ slightly from the one shown here.
Approved by the appropriate electrical regulatory authorities.
©Copyright Sunbeam 2026.
08/26